




Wahl Bros. Racing Anti-Stab Wheel Kit Mounting Instructions

1. Anti-Stab Wheel Kits help to prevent track spearing by preventing the track from coming into contact with the tips of the suspension rails. When shortening your suspension rail or removing rail tip protectors it is necessary to install an Anti-Stab Wheel Kit.
2. Available in two styles, part # 's 02-791A or 02-793A are for suspensions with offset or dual limiter straps and part # 's 02-790A or 02-792A are for suspensions with centered limiter straps.



3. The two styles include all of the necessary hardware needed to mount the Anti-Stab Wheel Kit to the tip of your rails, which includes four 2 3/4" rubber wheels, shaft, spacers and bolts
4. Installation is simple, by drilling a 3/8" hole in each suspension rail 1/2" back from end of rail and 1 1/4" up from bottom of slide. It is recommended to use thread lock when installing bolts. Periodically check bolt tightness after installation. Recommending cycling suspension to check for driver clearance after installation of Anti-Stab Wheel Kit.

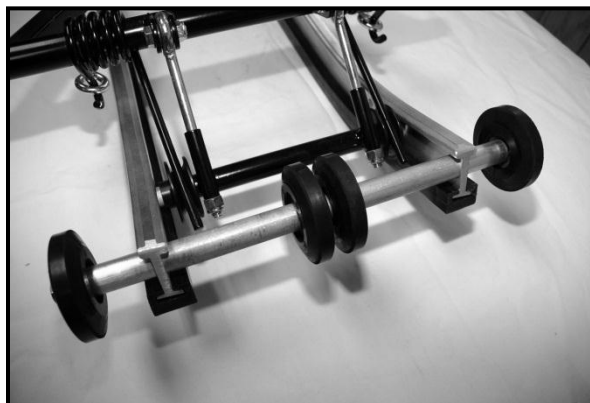

16860 State Highway 11
Greenbush, MN 56726
PH 218-782-2295
FX 218-782-2297
www.wahlracing.com
info@wahlracing.com