




03-069A & 03-070A Ski & Carbide Mounting Instructions

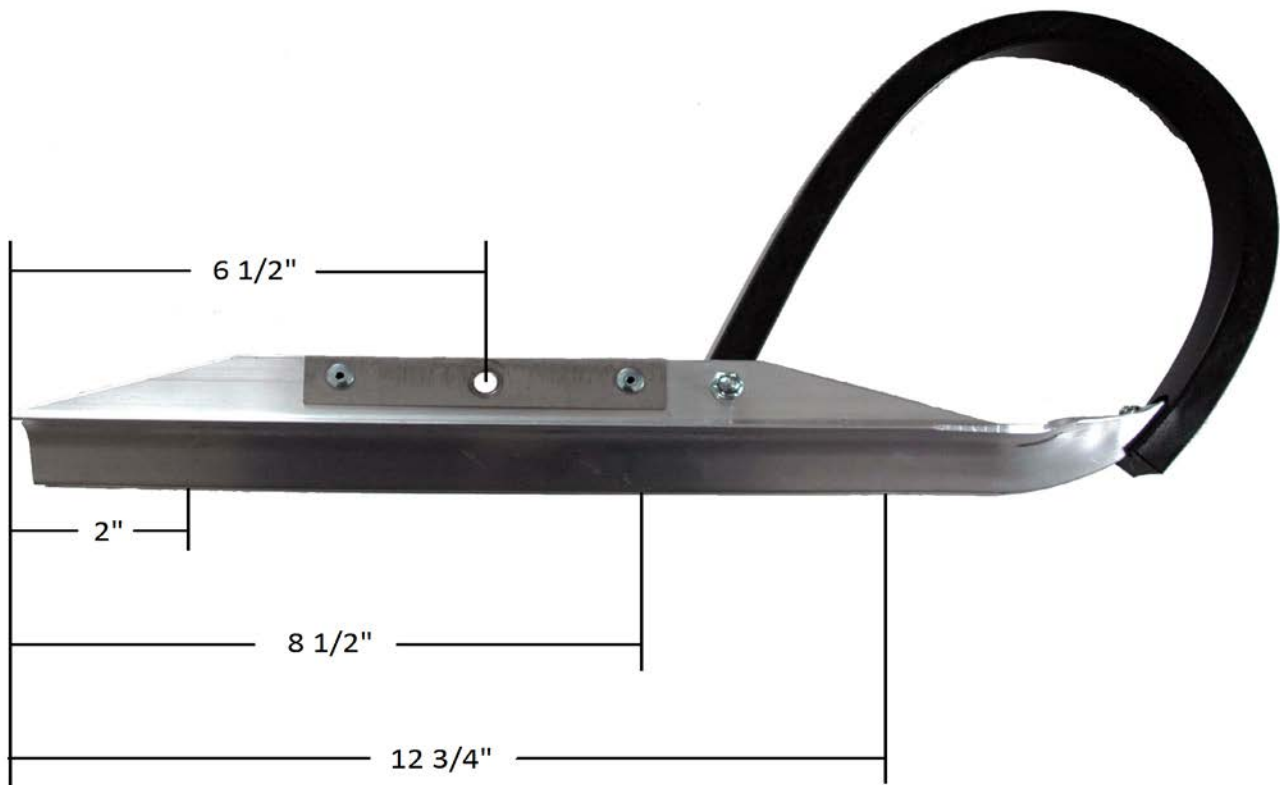

- All measurements are from the back of the ski to center of the hole.
- First drill 3/16" pilot hole. Finish with 3/8".
- Countersink carbide holes so that carbide base properly seats with ski bottom.
- The carbide measurements are for carbides listed below.
 - 04-924 CSD-5066, 6"
 - 04-928 CSD-5060, 10"
 - 04-956 CSD-5050, 14"